




# DESTEK SAÇLARI

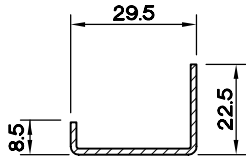


KASA-56  
DESTEK SACI (1.5)  
5145.111

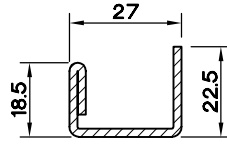


KASA-56  
DESTEK SACI (2.0)  
5145.112

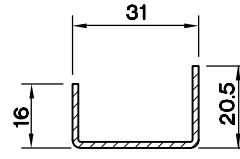


KASA-57  
DESTEK SACI (1.5)  
5145.121

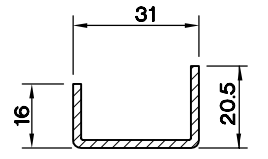


KASA-57  
DESTEK SACI (2.0)  
5145.122

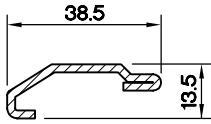


KANAT-45  
DESTEK SACI (2.0)  
5145.212

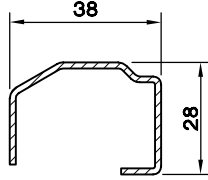


KANAT-55  
DESTEK SACI (1.5)  
5145.221

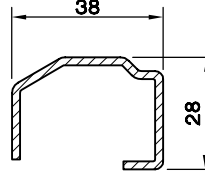


KANAT-55  
DESTEK SACI (2.0)  
5145.222

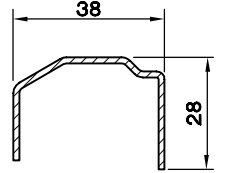


D.A. KANAT-74  
DESTEK SACI (1.5)  
5145.231

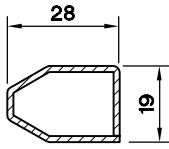


ORTAKAYIT -67  
DESTEK SACI (1.5)  
5145.311

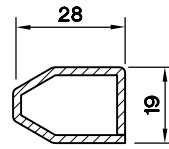


ORTAKAYIT -67  
DESTEK SACI (2.0)  
5145.312

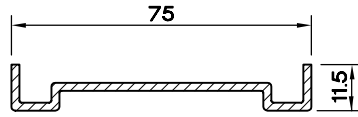


BAĞ -25  
DESTEK SACI (2.0)  
5345.112

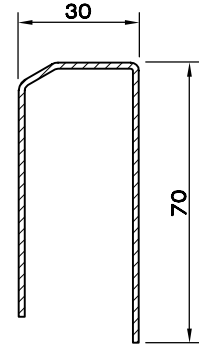


KAPI -100  
DESTEK SACI (1.5)  
5145.511

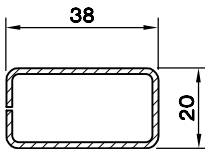


KUTU PR. ( 20 X 38 X 1.5 )  
5399.211

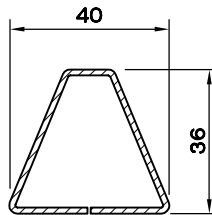


135° KÖŞE DÖNÜŞ  
DESTEK SACI (1.5)  
5399.421

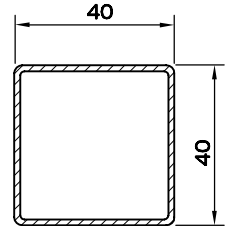


KUTU PR. ( 40 X 40 X 1.5 )  
5399.411

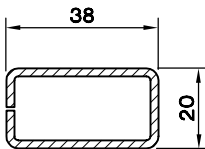

KUTU PR. ( 20 X 38 X 2.0 )  
5399.212

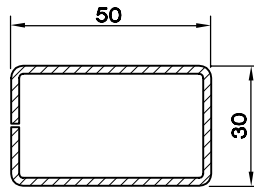

KUTU PR. ( 30 X 50 X 2.0 )  
5399.222

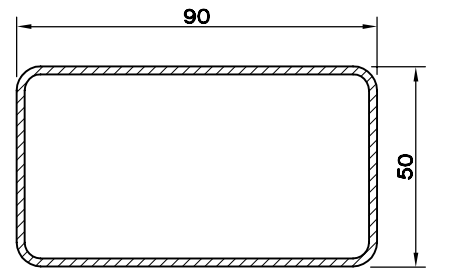

KUTU PR. ( 50 X 90 X 2.0 )  
5399.232